


### WIRE BASKETS


#### SOAP BASKET 828006

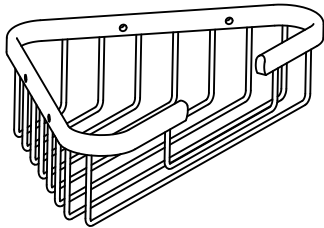

#### Tools required for installation




Level

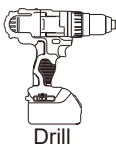

Drill



Pencil

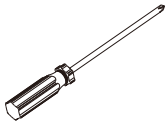

Screwdriver



Hammer

**Step 1**

Position the shower shelf against the wall and mark the holes with pencil.

**Step 2**

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

**Step 3**

Install screws into the wall and tighten them, ensure the product is level.

**Step 4**

Install the end caps onto the set screws.