

NAMEEK'S


Installation Instructions

Undermount Sink

Following these mounting instructions with the hardware included will be more than sufficient to support undermount installation. Please note: certain countertop materials may require additional hardware.

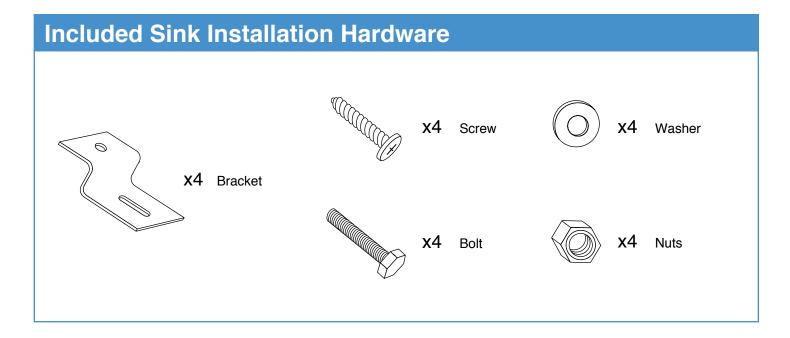


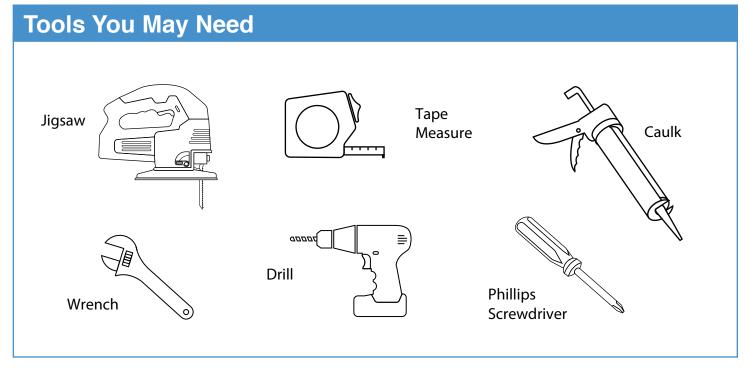

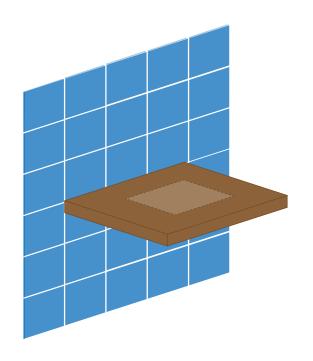

1. Prepare Location


Prepare vanity countertop according to the manufacturer's guidelines. Determine the sink's permanent location. Mark an opening for the sink and cut it out with the jigsaw. Finish the cut edge. **NOTE**: Easiest to install sink to countertop before installing countertop to wall or vanity.

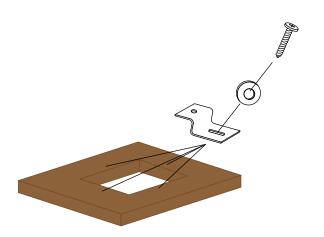

2. Install Mounting Brackets

Flip countertop over. Install bracket centered on each side (four brackets in total will be used). You may want to drill pilot holes for the screws. Do not fully tighten mounting screws. The bracket should still be able to move freely.




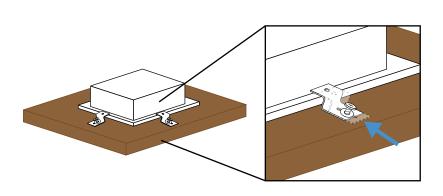

Place sink upside down over the open hole. Slide the brackets over sink edges and fully tighten the screws to lock sink to countertop. **NOTE:** For additional support you may add a bead of caulk to lip of sink before making contact with surface.

4. Secure Sink


Secure sink with bolts and nuts. Tightening the bolt will snug the sink to the countertop. **NOTE**: bolt should not puncture the sink and the bolt will protrude as shown after it is used to secure the sink in place. Do not overtighten, as this can result with a chip or crack in the sink.

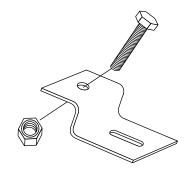




5. Install Top With Sink

Install the countertop to the wall or vanity following manufacturer's procedure.

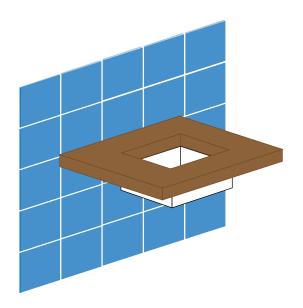

6. Install Caulk

Add a bead of caulk between the sink and countertop.

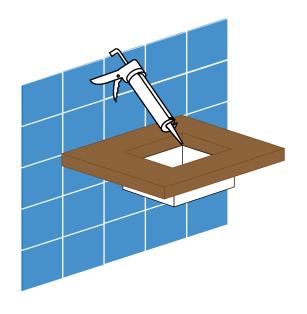

7. Sink Accessories

Complete your installation by adding the preferred plumbing accessories, such as the faucet, click clack drain, p-trap and angle valves to your sink.

