American Standard Town Square®S


18" Towel Bar 24" Towel Bar **Towel Ring Robe Hook Toilet Paper Holder** 23-5/8" Train Rack

Thank you for selecting American Standard... the benchmark of fine quality for over 140 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

INSTALLATION **INSTRUCTIONS** 7455018 Series 7455024 Series 7455190 Series 7455210 Series 7455230 Series


7455260 Series

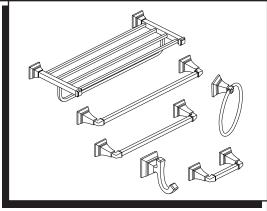

Certified to comply with ANSI A112.18.1M

RECOMMENDED TOOLS











INSTALLATION OF MOUNTING BRACKETS FOR ALL WALL MOUNTED ACCESSORIES

- The WALL MOUNTED ACCESSORIES work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the ACCESSORY is to be installed on a tile or plaster wall, the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. Make sure the centerline is level. Using the MOUNTING BRACKET (1) as a template, mark the two spots for the mounting holes. If MOUNTING BRACKET (1) is secured to a stud or cross brace. drill small pilot holes for SCREWS (2).
- For installations on tiled walls or drywall, use TILE ANCHORS (3) and SCREWS (2) for securing MOUNTING BRACKET (1) to wall. Drill two 1/4" diameter holes a minimum of 1-1/4" deep. Insert the two TILE ANCHORS (3) flush with face of finished wall. Place MOUNTING BRACKET (1) over TILE ANCHORS (3) and insert SCREWS (2) provided with a flat blade screwdriver. See illustration below.

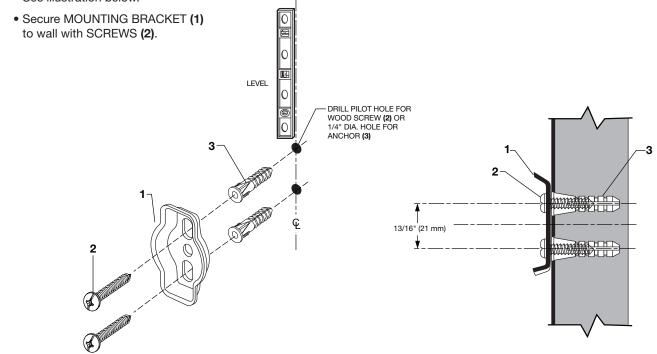


2 TOWEL RING and ROBE HOOK INSTALLATION

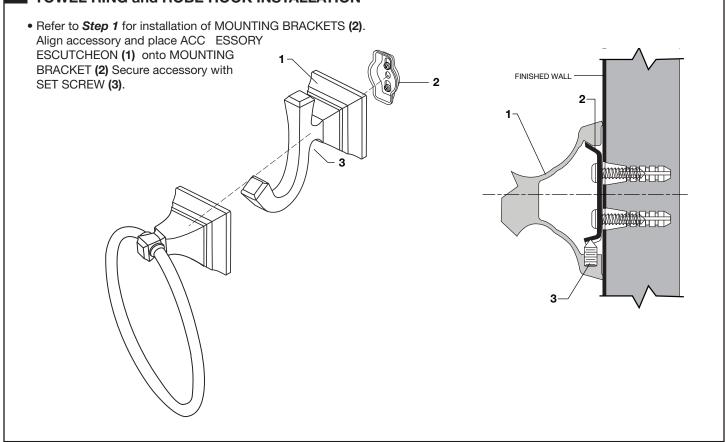


3 INSTALL TOILET PAPER HOLDER

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 6-11/16" (190 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

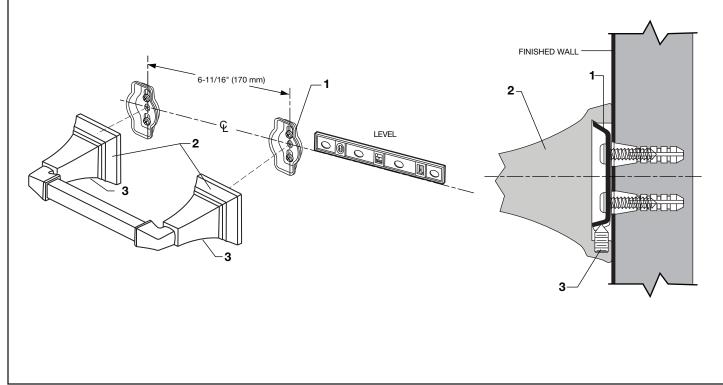


18" TOWEL BAR INSTALLATION

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 18" (457.2 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

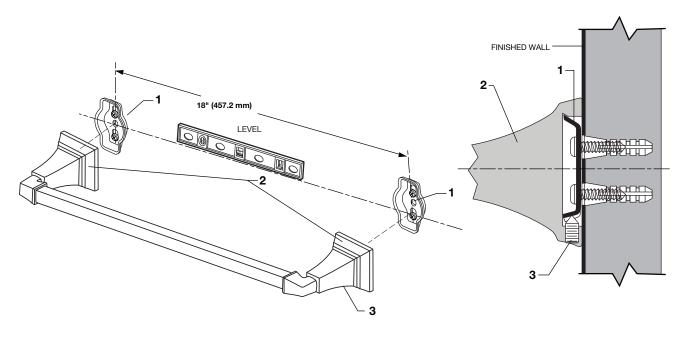


5 24" TOWEL BAR INSTALLATION


- Refer to **Step 1** for installation of MOUNTING BRACKETS (1). **NOTE: The center line distance between the two MOUNTING BRACKETS is 24" (609.6 mm). Make sure the two MOUNTING BRACKETS (1) are level.**
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

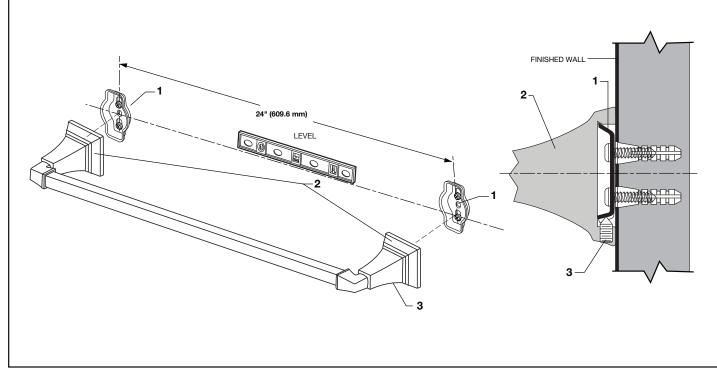

6 23-5/8" TRAIN RACK

- Refer to Step 1 for installation of MOUNTING BRACKETS (1).
 NOTE: The center line distance between the two MOUNTING BRACKETS is 23-5/8" (600 mm).
 Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

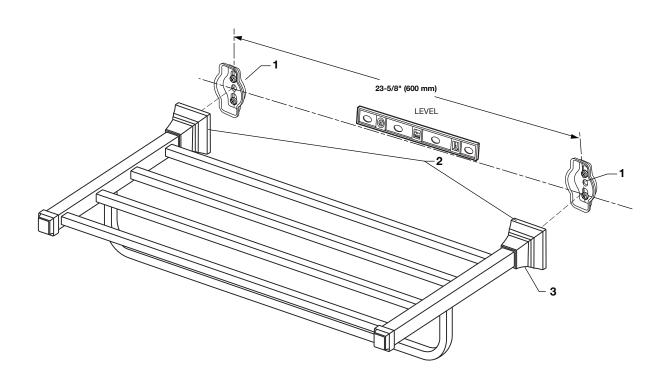

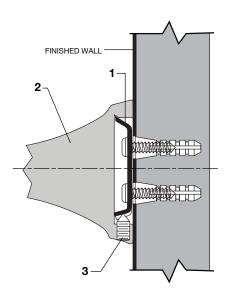

7 CARE INSTRUCTIONS:

DO: CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

Town Square® S 18" Towel Bar American Standard 24" Towel Bar **Towel Ring Robe Hook Toilet Paper Holder** 23-5/8" Train Rack **MODEL NUMBERS TOILET PAPER HOLDER** 7455018 Series 7455.230 7455024 Series 7455190 Series 7455210 Series 7455230 Series 7455260 Series M970516-0070A MOUNTING KIT Replace the "YYY" with appropriate finish code POLISHED CHROME 002 POLISHED NICKEL 013 **TOWEL RING BRUSHED NICKEL** 295 7455.190 **LEGACY BRONZE** 278 18" TOWEL BAR 7455.018 24" TOWEL BAR 7455.024 **ROBE HOOK** 7455.210 M970516-0070A MOUNTING KIT 23-5/8" TRAIN RACK 7455.260 HOT LINE FOR HELP For toll-free information and answers to your questions, call: 1 (800) 442-1902 Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) PART OF LIXIL Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200